Project: Performance Floors & All UG | Job No: J2214 | Model No: U86-PF-P | Proof No: 1 | Designer: Clive/Amy | Project Manager: Graham | Size (HxW): A5 | Designer/Artworker: | Senior Designer/SM: | Project Manager: | NPD: | Sign off date:

20	No. of pages	X	CMYK & Spots used correctly	X	All links are high resolution	X	Kerning check		Artwork packaged/Hi-res PDF
X	Vax logo correct size	NA	Icons consistent (if used)	NA	Cutterguide correct	X	No double spaces		Low-res PDF created
X	Brand style consistent	X	Correct photography used	X	Spell check completed		No widows	NA	Mock up produced (if required)

Performance is everything.™

Final Artwork

You're home.™

2 year guarantee

Performance Floors & All

Let's get started

U86-PF Series

vax.co.uk

Let's talk safety

Basic safety precautions

This vacuum cleaner is intended for household use only and NOT for commercial or industrial use.

- Only use the vacuum cleaner indoors on dry surfaces and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the vacuum cleaner.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only Vax recommended tools should be used with this vacuum cleaner.

Please keep instructions for further use and use only as instructed in this guide.

Don'ts

✘ Don't use the vacuum cleaner if it has been dropped, damaged or left outdoors.

✘ Don't run over the power cord or use the vacuum cleaner if the power cord or plug is damaged. Please contact our Customer Care Line.

✘ Don't handle the plug or use the vacuum cleaner with wet hands.

✘ Don't use the power cord as a handle, pull the power cord around corners, sharp edges, close a door over the power cord or unplug the vacuum cleaner by pulling on the power cord.

✘ Don't vacuum up sharp or hard objects or any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the vacuum cleaner in an area with explosive vapours or liquid.

✘ Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).

✘ Don't attempt to remove blockages with sharp objects.

✘ Don't use the vacuum cleaner with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.

Do's

✓ Turn off all controls on the vacuum cleaner before disconnecting or connecting the power cord, hose or accessories.

✓ Always make sure both the pre-motor/post motor filters are in place before use.

✓ Always take extra care when positioning the vacuum cleaner on the stairs.

✓ Keep all openings clear and free from debris as this may affect the airflow/suction.

✓ Always replace the fuse in the plug with a British 13amp fuse. Always protect the power cable from heated surfaces and open flames.

✓ Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it could be a trip hazard.

✓ Store your vacuum cleaner in a cool, dry area. If filters have been cleaned as per user guide instructions make sure they are thoroughly dry before storing away.

Thank you for buying this Performance Floors & All.

Taking care of your carpets and hard floors

The **Performance Floors & All** is designed to make vacuuming carpets and hard floors regularly, as effective and efficient as possible and this user guide will help you get the most out of your machine.

Maintaining your carpets and hard floors will ensure they keep their appearance for longer. You've chosen carpets and hard floors for your home for a reason and Vax will help you take good care of them.

Taking care of your Performance Floors & All

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you are to tackle your carpets and hard floors.

Taking care of you

We're here if you need us. Instead of taking me back to the shop, simply visit:

vax.co.uk/support or call:

(UK) **0844 412 8455** (ROI) 1-800 928 308

Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm

Calls are charged at the UK local rate. Please make a note of the serial number and model number of the product before calling.

Alternatively, you can write to us at:
Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK

vax
You're home.™

Let us know what you think **@VaxUK**

Contents

Let's talk safety

Getting to know your machine

Getting started

Using your machine

Taking care of your machine

Let's talk technical

What to do if it goes wrong

Getting in touch

Accessories

Notes

Performance Floors & All

Included with your machine

TurboTool

2 in 1 tool

Pre-motor filter


Post-motor filter

Getting to know your machine

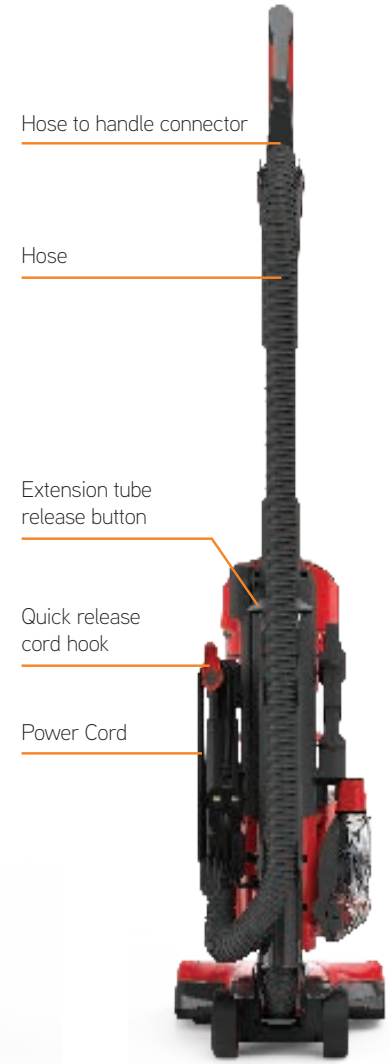

Technical Specification

Name **Performance Floors & All**
Voltage **220-240V~50Hz**
Wattage **1200W**
Cord length **10m**
Weight **7.5kg**

Subject to technical change without notice.

Accessories & Consumables

Filter Kit (Type 85)*
1-1-133857-00

Belt Kit (Type 22)*
1-1-133858-00

Pro Cleaning Kit (Type 2)
1-1-133326-00

Turbo Tool (Type 1)
1-1-126261-00

Flat Upholstery Tool (Type 2)
1-1-131394-00

Flexi Crevice Tool (Type 2)
1-1-131393-00

2 in 1 Tool (Type 3)
1-9-132115-00

*To purchase consumables and accessories, please visit **vax.co.uk**

PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE

Assembling your upright

Place the dirt container onto the main body and click into position.

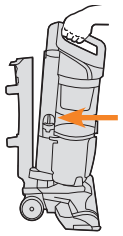

Align the main body with the floor head and push into place.

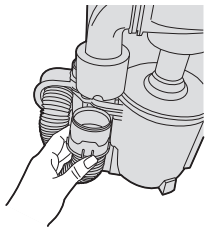

Push the hose into the hose to handle connector and twist to lock into position.

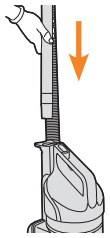

Insert the extension tube into the top of the main body and click into place.

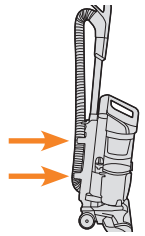

Push the hose into the hose clips on the machine.

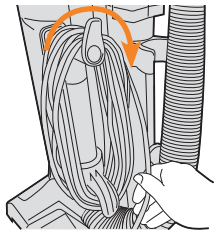

Wrap the power cord around the quick release cord hook and the lower cord hook, continue wrapping the power cord until it is secure.

Before you begin cleaning

- Always switch off and unplug the vacuum cleaner before connecting or disconnecting the hose/attachments, or removing and emptying the dirt container.
- The vacuum cleaner is equipped with a thermal cut-out. If for any reason the vacuum cleaner does overheat the thermostat will automatically turn the vacuum cleaner off. If this happens, switch the vacuum cleaner off and unplug from electrical socket. Remove and empty the dirt container also check the vacuum cleaner for blockages. Allow the vacuum cleaner to cool for approximately 1 hour (if you have cleaned the filters please wait 24 hours for the filters to fully dry before putting back into the vacuum).
- For best cleaning results filters require cleaning at least every 3 months.
- If the vacuum cleaner is blocked, switch off and unplug before removing the blockage.
- When using the accessories always make sure the brushbar is switched to the off position.

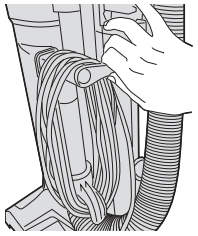

Twist the quick release cord hook to release the power cord.

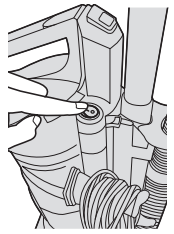

Plug in the machine. Press the power on/off button to turn on.

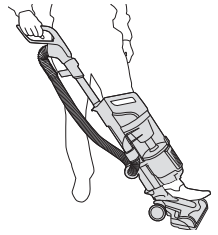

Place your foot gently onto the floorhead and pull the handle back to recline the machine.

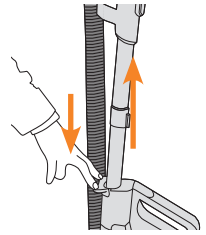

To release the handle with extension tube press the extension tube release button and lift the handle to remove.

Using the floorhead without the main body

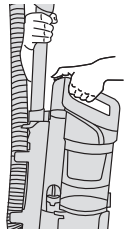

To remove the main body: Hold the dirt container handle, press the main body release button and lift to remove.

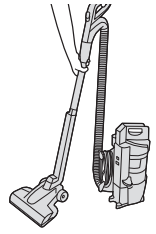

Put the main body to one side, use floorhead for difficult to reach places.

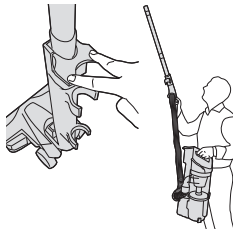

Press extension tube release button and lift the handle to remove.

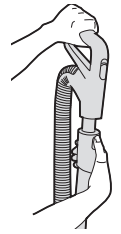

Press handle release button, pull extension tube to remove.

Attaching accessories to telescopic tube or handle

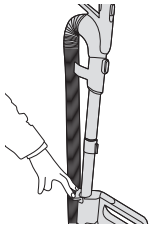

Press extension tube release button and lift handle to remove extension tube.

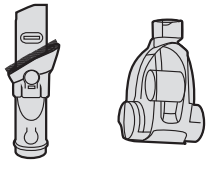

Choose an accessory.

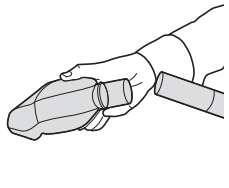

Attach accessories to the end of extension tube or handle.

Always hold the vacuum cleaner when using the hose or extension tube.

Emptying and cleaning the dirt container

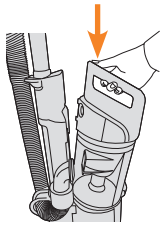

Press the dirt container release button and pull to remove the dirt container.

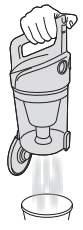

Hold dirt container over a bin and press the dirt container release button to open, allowing dirt to fall out.

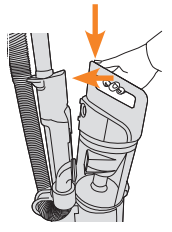

When re-attaching the dirt container, align the base first then push until you hear an audible click. The dirt container is now locked in place.

Cleaning the post motor filter

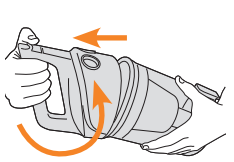

Turn the dirt container lid anti-clockwise and lift to remove.

Grasp tab on filter and pull to remove.

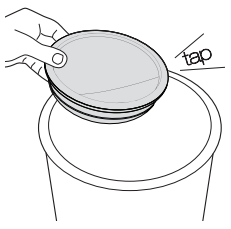

Tap the filter over a bin to release any dirt.

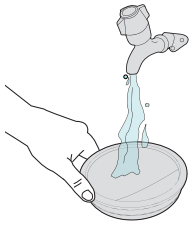

Wash the filter under running water (40°C max).

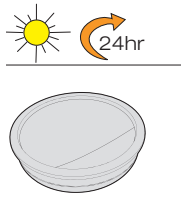

Leave to fully dry for at least 24 hours before putting back into the vacuum cleaner.

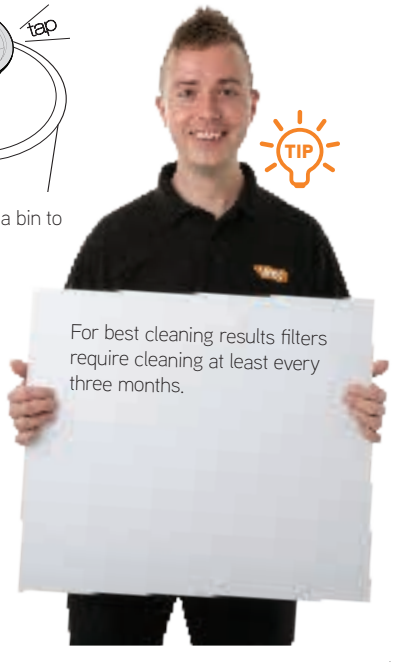

Cleaning the shroud

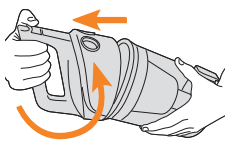

Turn the dirt container lid anti-clockwise and lift to remove.

Grasp tab on filter and pull to remove.

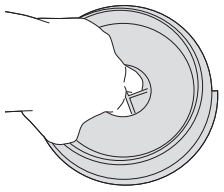

Grasp the centre of the shroud and pull to remove.

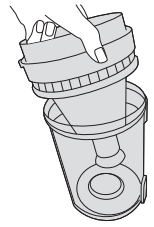

Lift the shroud from the dirt container and tap over a bin to remove dirt and debris.

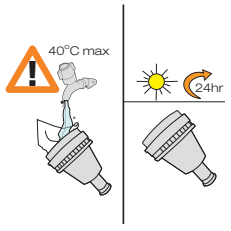

Wash the shroud under running water (Max 40°C) and leave to fully dry for at least 24 hours before replacing back into the dirt container.

Cleaning the post motor filter

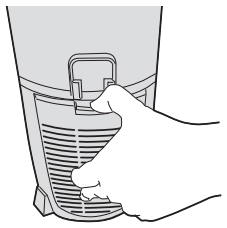

Press button on post motor filter cover and remove.

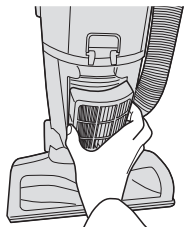

Pull the post motor filter from the machine.

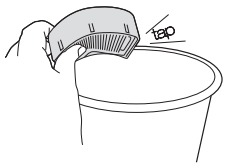

Tap the post motor filter over a bin to remove any dirt and debris and replace it into the machine.

Removing debris from the brushbar

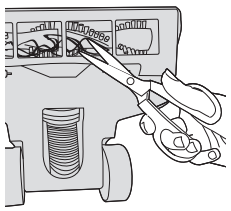

Switch off your vacuum cleaner at the main socket. Using a pair of scissors, cut any hair or debris free from around the brushbar.

Removing blockages from the TurboTool

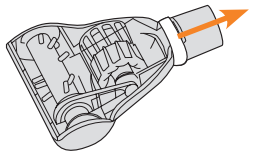

Remove the rubber ring.

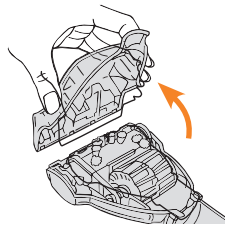

Push both buttons to open the turbo tool.

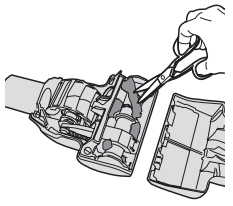

Using a pair of scissors, cut any hair or debris free from around the brushes.

Changing the belt

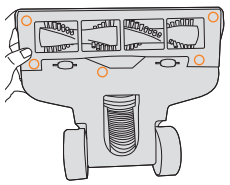

Switch off and unplug your vacuum cleaner. Recline the vacuum and lie it on its front, remove 5 screws to release brushbar cover.

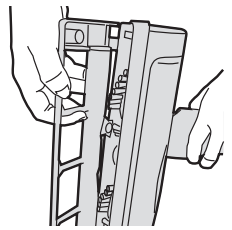

Remove the brushbar cover and push the floor head into reclined position.

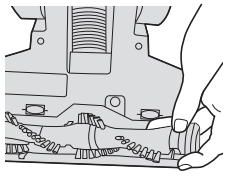

Lift the brushbar out of the floor head and remove the drive belt.

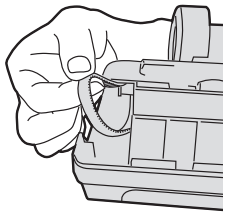

Remove the drive belt and any debris from the spindle. Loop new drive belt around the spindle first and then onto the brushbar. Insert the brushbar back into floor head and replace the brushbar cover, insert 5 screws to secure.

What to do if it goes wrong

Problem	Solution
There is an accessory missing	• Check the 'This pack contains' panel on the box to make sure the part is included with your machine.
Why does my vacuum cleaner have no power?	• The plug may not be fully pushed into the electrical socket. • Check the fuse in the plug if this needs replacing, always replace with a British 13amp fuse. • The motor thermostat may have tripped. If this has happened, unplug the vacuum cleaner. Remove and empty the dirt container and check the hose for blockages Clean the filters and allow the vacuum cleaner to cool for approximately 1 hour (if you have washed the filters you will need to wait 24 hours for the filters to fully dry before putting them back into the vacuum cleaner).
Why won't the vacuum cleaner pick up?	• The dirt container may be installed correctly, remove the dirt container and re-attach making sure it is clicked firmly into place. • There may be a blockage in the hose. Please remove the hose from the vacuum cleaner, check and clear any blockages. • Dirt container may be blocked, empty the dirt container and clean filters. Go to the 'Taking care of your machine'. • If the accessory/tool will not pick up, check and clear any blockages. • The brushbar may not be turning. Go to 'My brushbar isn't turning' below.
My brushbar isn't turning?	• The brushbar may be clogged, check the brushbar and clear any hair or debris. • The belt may be broken, go to 'Let's talk technical'.

Warning: Always switch off and unplug the vacuum cleaner before performing maintenance/troubleshooting checks.

It's quick and easy to register for your FREE
2 year guarantee
Online at: vax.co.uk/guarantees
Please retain your original receipt for proof of purchase
we're here if you need us
Online vax.co.uk/support
Call: (UK) 0844 412 8455 (ROI) 1-800 928 308
Monday-Friday 8.30am to 6.30pm, Saturday 9.00am to 5.00pm *
Alternatively, you can write to us at:
Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK

Don't forget your accessories!

Order at: www.vax.co.uk/spares-and-solutions

Pro cleaning kit
1-1-133326-00

All our best tools all in one kit that makes cleaning your home quicker, easier and with even better results. We've taken care of cleaning all of the hard to reach areas such as on top of cupboards and in between blinds to the dust that collates behind and within the radiator.

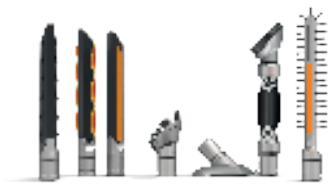

TurboTool
1-1-126261-00

Use the TurboTool for vacuuming your stairs, upholstery and car interiors. It's great for picking up stubborn pet hair.

Flat Upholstery Tool
1-1-131394-00

Cleans large areas of upholstery like sofas and curtains, quickly and effectively.

2 in 1 Tool
1-1-132115-00

2-in-1 tool includes crevice tool for awkward areas and corners and a dusting brush for areas such as skirting.

Flexi Crevice Tool
1-1-131393-00

A handy long, flexible tool for getting far behind and around furniture.

You're home.™

@VaxUK

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK
email: **info@vax.co.uk** website: **vax.co.uk**

Version 1.0

EEC Statement of Compliance: Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the U86-PF series is manufactured in compliance with the following Directives:
Safety: 2006/95/EC Low Voltage Directive. **EMC**: 2004/108/EC Electromagnetic Compatibility Directive.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.